

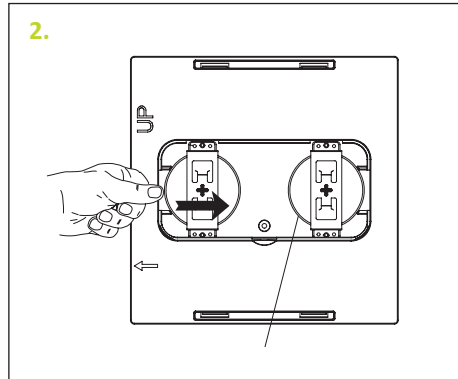


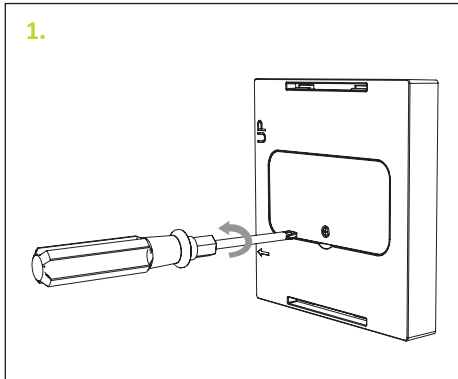

1. Remove the locking screw on the battery compartment cover using a Cross-head screwdriver.
2. The battery type is CR2430. Slide the button battery to the center and remove it.

Batteries are not included.

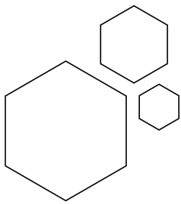

Controller Indicator Light Status:

1. Yellow Light Flashes Once: System reset.
2. Green Light Illuminates (PressAny Key): Sufficient battery level.
3. Red Light Illuminates (PressAny Key): Low battery level.
4. Green Light Flashes Once: Long-press to wake.
5. Sleep Mode: Indicator lights inactive.

