


surface mounted.

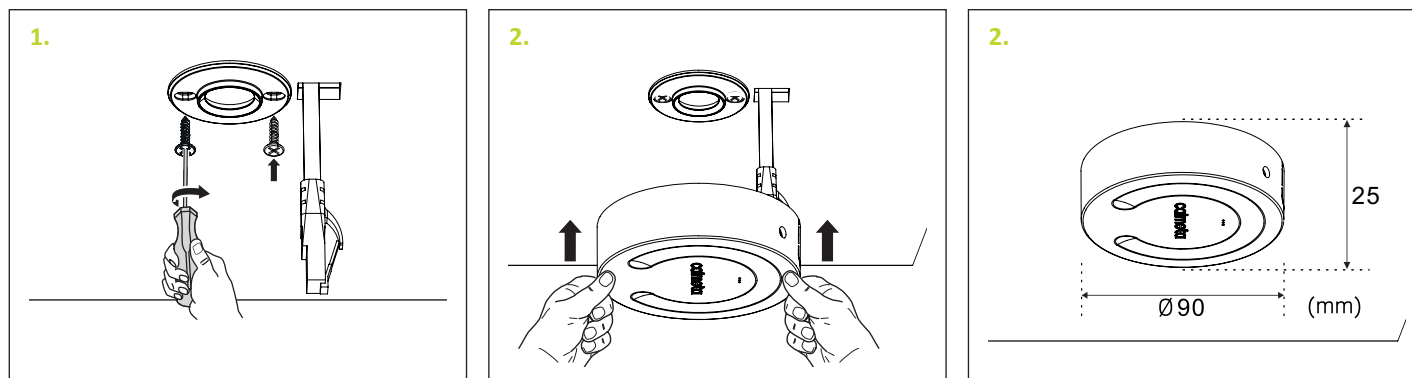


Indicator lights.

Green light flash slowly
Green light flash rapidly
Steady green light

> waiting for configuring
> configuring network
> working normally

Yellow light flash slowly
Yellow light flash rapidly
Steady yellow light


> app connect to device
> restoring factory setting
> network anomaly

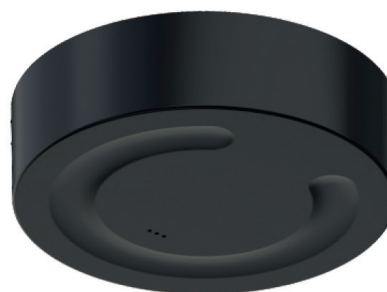

Power supply and network connection.

There are two way for power supply and network connection:

1. PoE (UTP CAT.5E 26AWG. already include network connection, sensor to PoE switch <100 meters).
2. Power adapter (independent network needed).

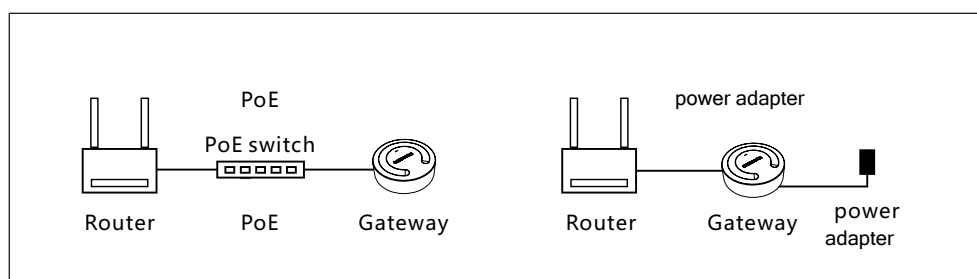

Quick settings.

Scan QR code below. Or go directly to jacskoopman.nl/sense

